



01-10/ Pin # Ld

See troubleshooting flowchart

Change pin holder

Check adjustment or replace switch

See trouble shooting chart

If problem moves with component, replace or repair

Click here to email KMK experts

Start

Pins jammed in distributor lane

Yes

No

Problem with pin holder

Yes

No

Pin count switch functioning correctly

No

Yes

Table height too high

Yes

Check table height adjustment

Is shark flipping?

Yes

No

Table too low

Yes

No

Check table height and pin release lever adjustment

Swap cables and or CPU board to another machine

Yes

No

See trouble shooting chart

No

If problem moves with component, replace or repair

