



Pinsetter Cycles Independently (One Cycle Only)

**Caution**  
Flash Photography can cause the pinsetter to Cycle

Adjust Ball Detector

Ball Detector Out of adjustment

Inspect and Correct Molex Plug

Bad Connection at the Molex Plug

Remount Reflector and Adjust Ball Detector

Loose Reflector

Inspect and Correct

Short in Bowlers Reset Button

Inspect and Correct

Shorted wiring from Front ball return to Nexgen Box

Change to Correct mode

Nexgen Box Set to Wrong mode

Faulty Power Connection

Inspect and Correct

Consult Qualified Electrician

Problem with 3 Phase Power

Click Here to Email KMK Experts