



Single Motor Will not Operate

Change Fuse, Verify Green LED

Blown Fuse on CPU Board

Turn on Breaker, Verify all 3 phases are on.

Verify House Circuit Breaker is on

Repair as needed

Bad Cables or Connectors

Replace Motor

Bad Motor

Bad CPU Board

Change CPU Board

Bad High Voltage Board

Change High Voltage Board

Click Here to Email KMK Experts